


Removing and installing oil temperature sender -G8-

Removing

- Carefully pull engine cover panel off four retaining pins one after the other - arrows-.
- Pull off bonnet seal at lock carrier.

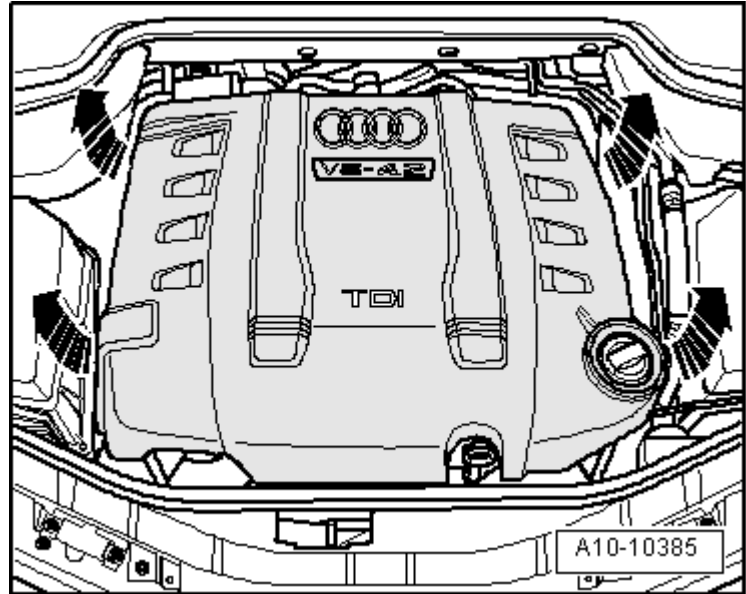

- Unplug electrical connector -2- at oil temperature sender -G8-.
- Unscrew oil temperature sender -G8-.

**i** Note

Disregard -item 1-.


Installing

Installation is carried out in the reverse order; note the following:

**i** Note

Renew seal.

Tightening torque

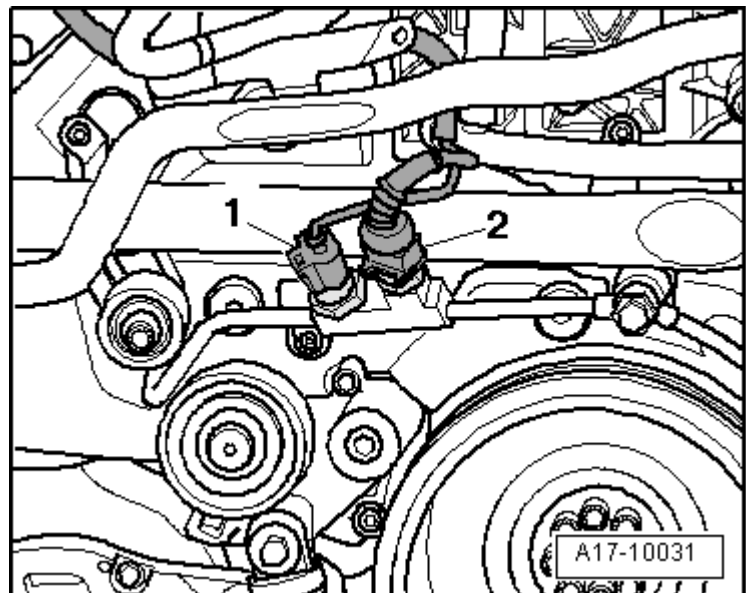

Component	Nm
Oil temperature sender -G8- to oil pipe	14