

Assembly overview: Servotronic Checking speed signal

The vehicle speed signal comes from the instrument cluster.

- - → If power supply, Servotronic valve and vehicle speed display on speedometer are OK, check wiring between contact 4 and instrument cluster.

=> Current Flow Diagrams, Electrical Fault-finding and Fitting Locations

- - Replace Servotronic relay if wiring between contact 4 and instrument cluster is OK.

