


Assembly overview: Servotronic Checking voltage supply for Servotronic

- - Open box in passenger side footwell

=> Current Flow Diagrams, Electrical Fault-finding and Fitting Locations binder

- - → Detach relay for Servotronic -J236-, Pos. 12.
- - Switch on ignition.
- - Set digital multimeter -V.A.G 1526- to voltage measuring range up to 20 Volt.
- - Measure at relay connector between contacts 6 and 8.
 - Specified value: approx. 12 V.
- - Check wiring if specified value is not attained.

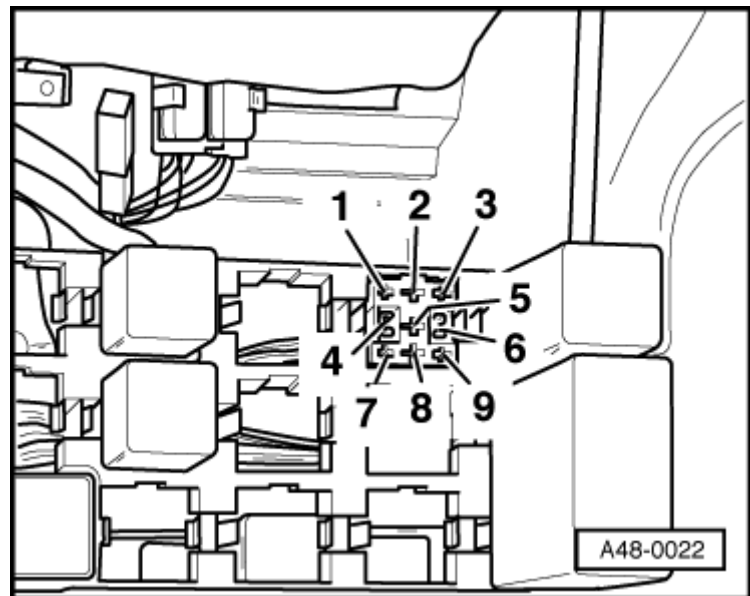

=> "Current Flow Diagrams, Electrical Fault-finding and Fitting Locations" binder